

# Programming Your Remote Control

1. Turn on your television.
2. Press and release the **TV** button.
3. Press and hold the **RCU SETUP** button until the TV button blinks twice.
4. Enter **9-9-1**.
5. Aim the remote at the TV. Press and release the **POWER** button.
6. Press and release the **CH+** slowly until the TV turns off.
7. Press the **POWER** button to turn the TV back on.
8. Press the **RCU SETUP** button to store the code for the TV. The TV button will blink twice.
9. Press and release the **STB** button.
10. Press and hold the **RCU SETUP** button until the **STB** button blinks.
11. Enter **9-9-5**.
12. Press and release the **POWER** button.
13. Press and release the **TV** button.
14. Press and release the **POWER** button.
15. Press and release the **STB** button.
16. Press and hold the **RCU SETUP** button until the **STB** button blinks twice.



# Programming Your Remote Control

1. Turn on your television.
2. Press the **TV** button and hold it for 5 seconds. The **DEVICE MODE** button will light up.
3. Press the **POWER** button.
4. Aim the remote at the TV and press either the **CH UP** or **CH DN** button to start auto-scan. The **TV/AUX** button will blink every 5 seconds while in scan mode.
5. When the TV turns off, the code has been found. Press **OK** to lock the code.

*If all code sets are exhausted in the search and the OK button is not pressed, the TV button will blink 7 times and the search mode will cancel.*

6. Press and hold the **STB** button for 5 seconds. The **STB** button will light up.
7. Press **POWER**.
8. Press **1**.
9. Press **OK**.



# Programming Your amino or entone Nova Remote Control

Programming or resetting your remote is an easy process and only takes a few steps:

## Programming Your Remote:

By default, a key pressed on the remote control is sent to the selected device mode only. The punch through function allows specific keys to be sent to a particular device (for example, the **VOL +/-** key may need to be sent to the AUX device instead of the TV).

1. Turn on your device.
2. On the remote control, press the corresponding Device Control key (**TV/DVD/AUX**) to choose the device mode.
3. Press and hold the **SETUP** key until the LED light blinks twice.
4. Press the number keys **9-9-1**, in that order.
5. Press the **POWER** key.
6. Press the **CH+** key repeatedly until your device turns off.
7. Press and hold the **SETUP** key until the LED blinks twice to save the working code.

*If the LED has a long blink, an error has occurred. Please retry steps 1-7 until successful.*

## After Programming Your Remote:

1. Press and hold the **SETUP** key until the LED blinks twice.
2. Press the number keys **9-7-8**, in that order.
3. Press and hold the **SETUP** key until the LED blinks twice.

*If the LED has a long blink, an error has occurred. Please retry steps 1-3 until successful.*



# Programming Your Senior Remote Control

1. Press and hold **SET** until the LED blinks twice.
2. Type **9-9-1**. The LED should blink twice.
3. Press **CH+** repeatedly until the TV turns off.
4. Press **SET** to save the code.

